

Getting Started

Dynamic SoundField


1.




2a.




2b.

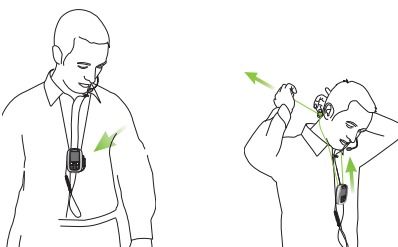

3.

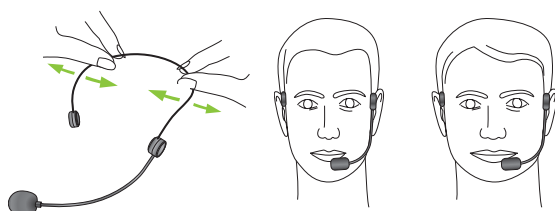

4.

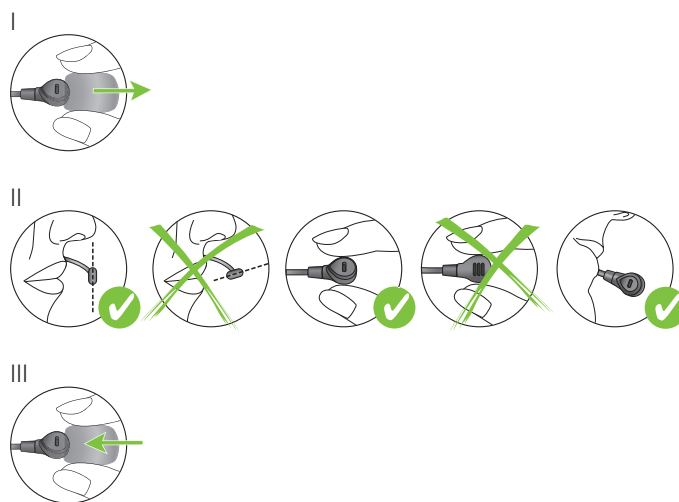

5.



6.



Switch On inspiri

7.



Switch On DigiMaster 5000

8.

Ready, start talking.

DigiMaster 5000 LED status indicators



Constant blue light:
Standard operating mode



Blue blinking light:
Power-saving stand-by mode



Yellow blinking light:
inspiri not paired



Constant green light:
inspiri mic muted



Constant red light:
DigiMaster 5000 needs re-starting