



Getting Started Dynamic SoundField


1.

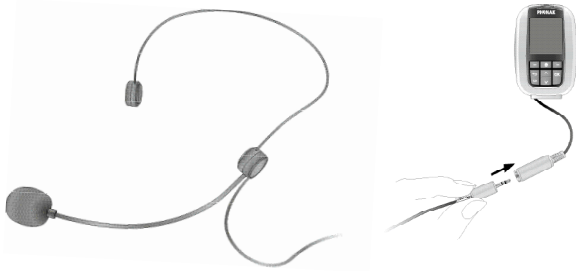


2a.

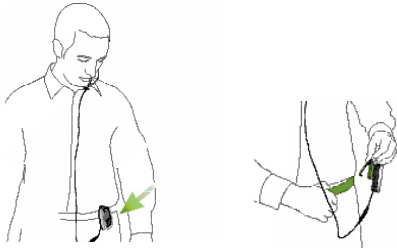


2b.

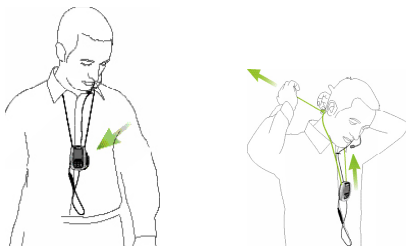

3.

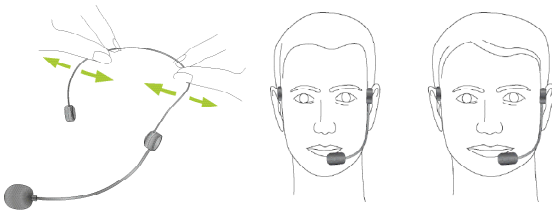

4.

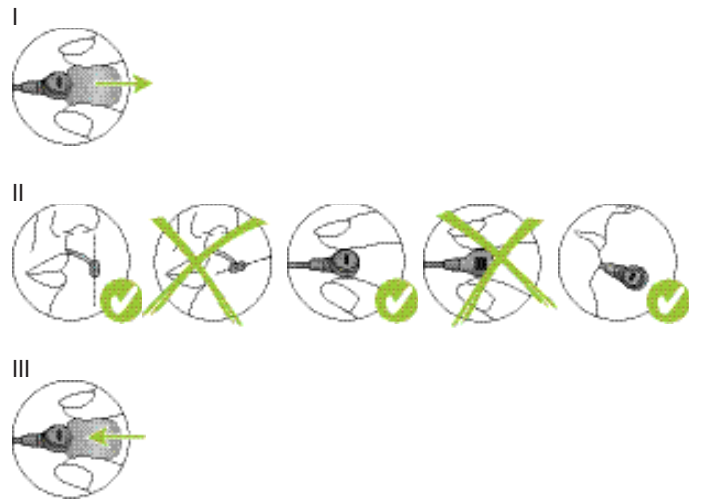

5.




6.



Switch On inspiro

7.

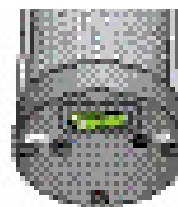






Switch On DigiMaster 5000

8.

Ready, start talking.

DigiMaster 5000 LED status indicators

-  Constant blue light:
Standard operating mode
-  Blue blinking light:
Power-saving stand-by mode
-  Yellow blinking light:
inspiro not paired
-  Constant green light:
inspiro mic muted
-  Constant red light:
DigiMaster 5000 needs re-starting